


# Voice Activation Instructions

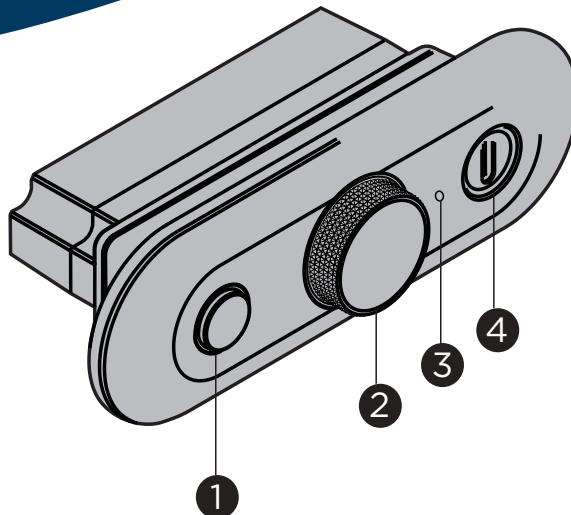

## TOGGLE FEATURES AND VOICE COMMANDS

### 1 Turn on and Reset Button:

- Press centre button briefly to activate the voice control.
- While using, press and hold the home button for three seconds to reset the lounge.
- Press centre button briefly to stop the current action.

Nine Voice commands – start by saying '**Hello La-Z-Boy**':

- Recline the Back
- Raise the Back
- Raise the Footrest
- Lower the Footrest
- Raise the Headrest
- Lower the Headrest
- Rest Mode
- Home Position
- Stop

\*Variations of the above commands are integrated to capture different possible outcomes\*

### 2 Toggle Control:

- Turn the toggle control clockwise slowly to gradually extend the footrest.
- Turn the toggle control clockwise quickly to extend the footrest.
- Turn the toggle control counterclockwise slowly to gradually retract the footrest.
- Turn the toggle control counterclockwise quickly to reset the footrest.

### 3 Microphone:

- Built in microphone; voice commands available with option Voice Activation.

### 4 USB-C:

- USB-C charging capabilities.

**LONG LIVE THE LAZY™**  
LA Z BOY®